

LESCO 80# Rotary Spreader

THE FOLLOWING INFORMATION SHOULD BE USED AS A STARTING POINT ONLY. PROPER SPREADER CALIBRATION IS MANDATORY FOR ACCURATE PRODUCT APPLICATIONS!

80lb Capacity Spreader Setting	Step Gauge Setting
A	***
A.5	***
B	6
B.5	7
C	8
C.5	9
D	10
D.5	11
E	12
E.5	13
F	14
F.5	15
G	16
G.5	17
H	18
H.5	19
I	20
I.5	21
J	22
J.5	23
K	24
K.5	***
L	***
L.5	***
M	***
M.5	***
N	***
N.5	***